

Use the Driving-Position Memory System

You can store two driver-seat positions (except power lumbar) with the driving-position memory system. Your Honda has two remote entry fobs/transmitters: one is linked to Driver 1 and the other is linked to Driver 2.



Storing a Seat Position

- 1 Make sure the power is ON and the transmission is in PARK.
- 2 Adjust the driver's seat to your desired position.
- 3 Press the SET button on the driver's door; the indicator light will come on.
- 4 Within 5 seconds, press and hold the appropriate memory button; you'll hear a beep when the position is set.

Recalling a Stored Seat Position

- 1 Make sure the transmission is in PARK and set the parking brake.
- 2 Press the appropriate memory button; the seat will move to the stored position.



See your vehicle's Owner's Manual for even more details. You can download one at mygarage.honda.com.

2023 Accord Touring Hybrid shown